

Operating System		OS:STATIONARY DOTS	OS:SEVEN SEGMENT	OS:SCROLLING (SCRL)
Chanel		4	16	4
DMX Address Limit		512	512	255
Special Information		Stationary	N+12 > 50%	Moving Text
DMX Profile	PAN	n+0	n+0	n+0*
	TILT	n+1	n+1	n+1*
	FOCUS	n+2	n+2	n+2*
	TROLLEY	n+3	n+3	n+3*
			n+4 n+5 n+6 n+7 n+8 n+9 n+10 > 50% (FAN) n+11 N+12 > 50% (IMPORTANT) n+13 n+14 n+15	
Active DMX%	STOP	<20%	25% - 50%	
	DIR1	20-40%	<25%	<30% (RIGHT)/DOWN
	STOP	40-60%	25% - 50%	35-62%
	DIR 2	60-80%	>50%	>66% (LEFT)/UP
	STOP	>80%	25% - 50%	

* OS : SCRL -> SELECT DMX MODE 1

OS : SCRL - Programming (Scrolling screen unit)	Moving Display NOTE <255 ADDRESS DMX LIMIT
<p>To Select the Mode Press the SQUARE key, "M> (Menu)" Press the down ARROW, "Select Mode" (OPTION 1) Press CIRCLE to choose that option. Press DOWN ARROW to cycle option, CHOOSE DMX-1 (Important) Press the CIRCLE to accept</p> <p>To Select the Channel (Note 1-255 Only) Press the SQUARE key, "M> (Menu)" Press the down ARROW twice, "Select Number" (OPTION 2) Press CIRCLE to choose that option. Use the UP and DOWN keys to select the channel number Press the CIRCLE to accept</p>	

<p>OS : STM This display has a stationary dotmatrix display Press SQUARE key to alternate FIX / DMX Choice will flash - this means it's not yet stored. Press UP/DOWN arrow to select channel. Press CIRCLE to store. (If you don't store it, it will revert to the previous setting)</p>
--

<p>OS: 7 SEGMENT Press SQUARE key to alternate Fxx / xxx (x = number) Choice will flash - this means it's not yet stored. Press UP/DOWN arrow to select channel. Press CIRCLE to store. (If you don't store it, it will revert to the previous setting)</p>	<p>Fxx is handcontrol, xxx is lighting desk mode</p>
--	--